




# Build your own 3040NU-138

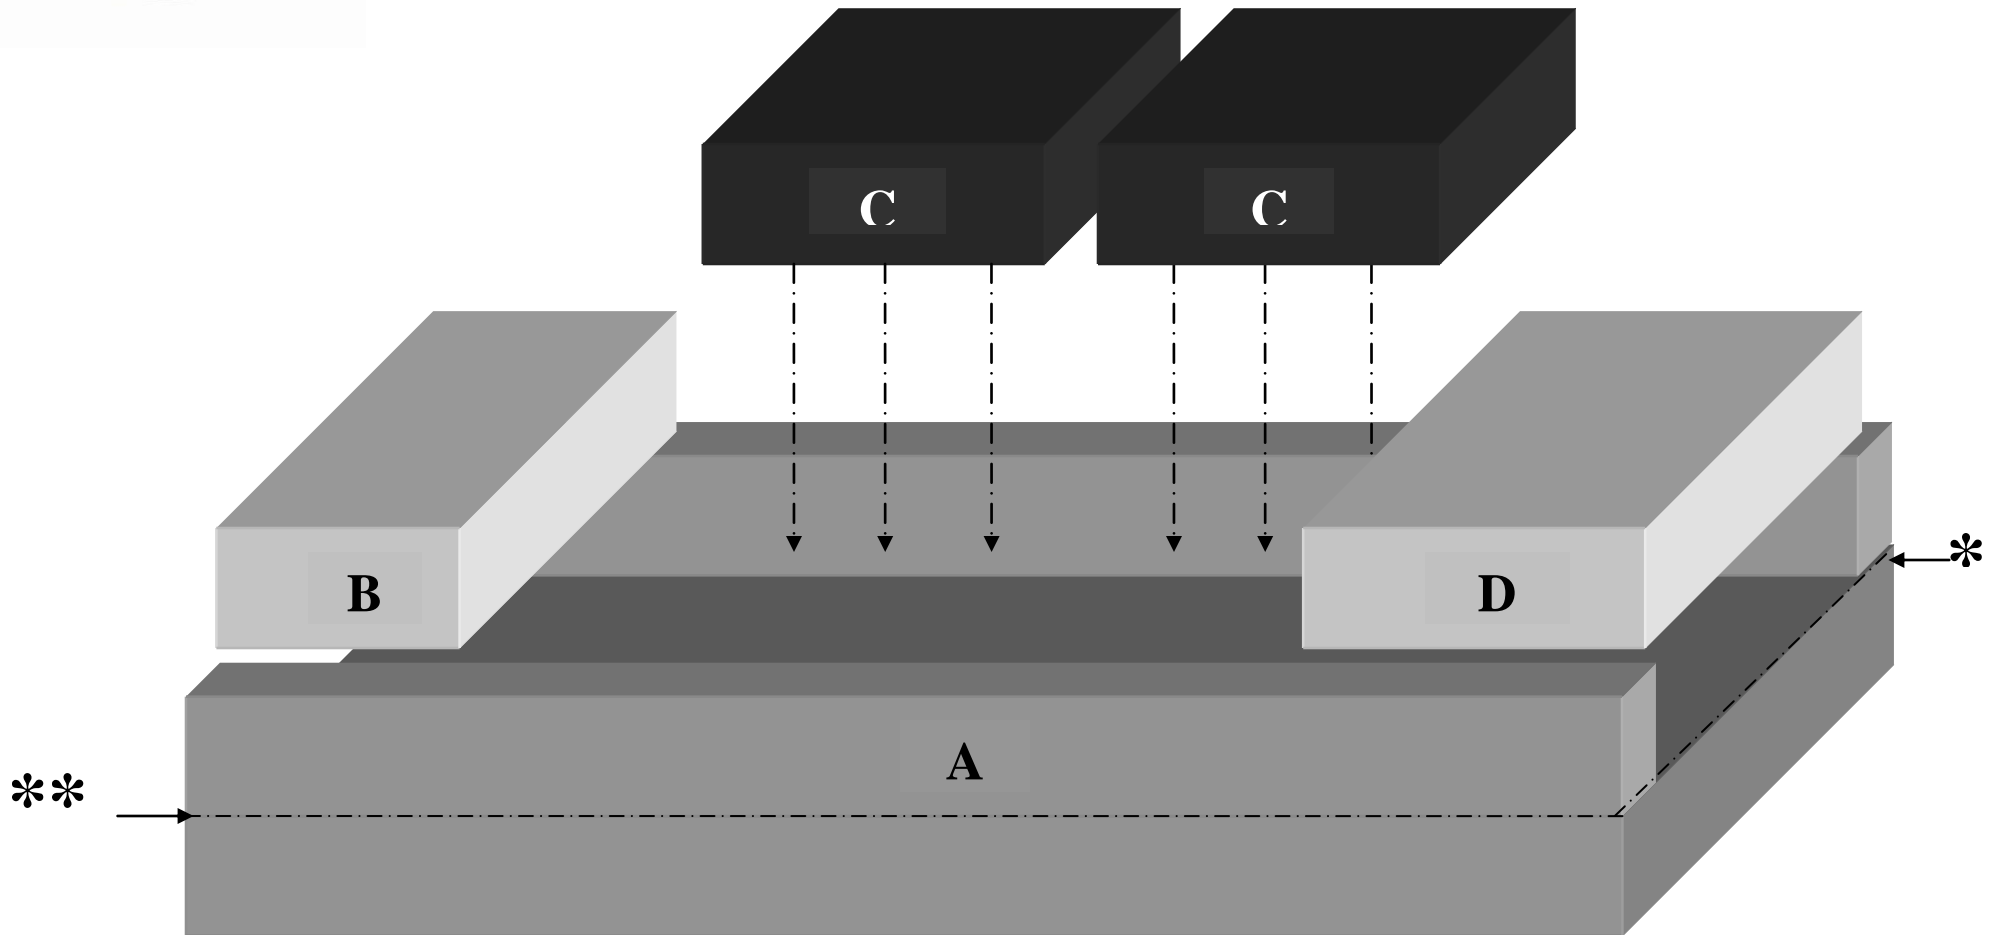

## How to build your own 3040NU-138

- A) 1 x Item #3040-BSR (6''x36''x80'' Foam Base with built in full length Transfer Edges)
- B) 1 x Item #FS-1230 (3''x12''x30'' Poly/ Foam Section with snaps) (Always Male Snaps)
- C) 2 x Item #FI-1930 (Poly/Visco Foam Insert 3''x19''x30'' with snaps on both sides) or ROHO Section
- D) 1 x Item #FS-3030 (3''x30''x30'' Poly/Foam Section with snaps) (1xFemale Snaps)
- E) 1 x Item #ZR5 (Recovery 5 Removable Cover comes with Zipper)

\* Built in full length transfer edge

\*\* 360 degree zipper for attaching ZR5 Cover