




# Build your own 3040NU - 157

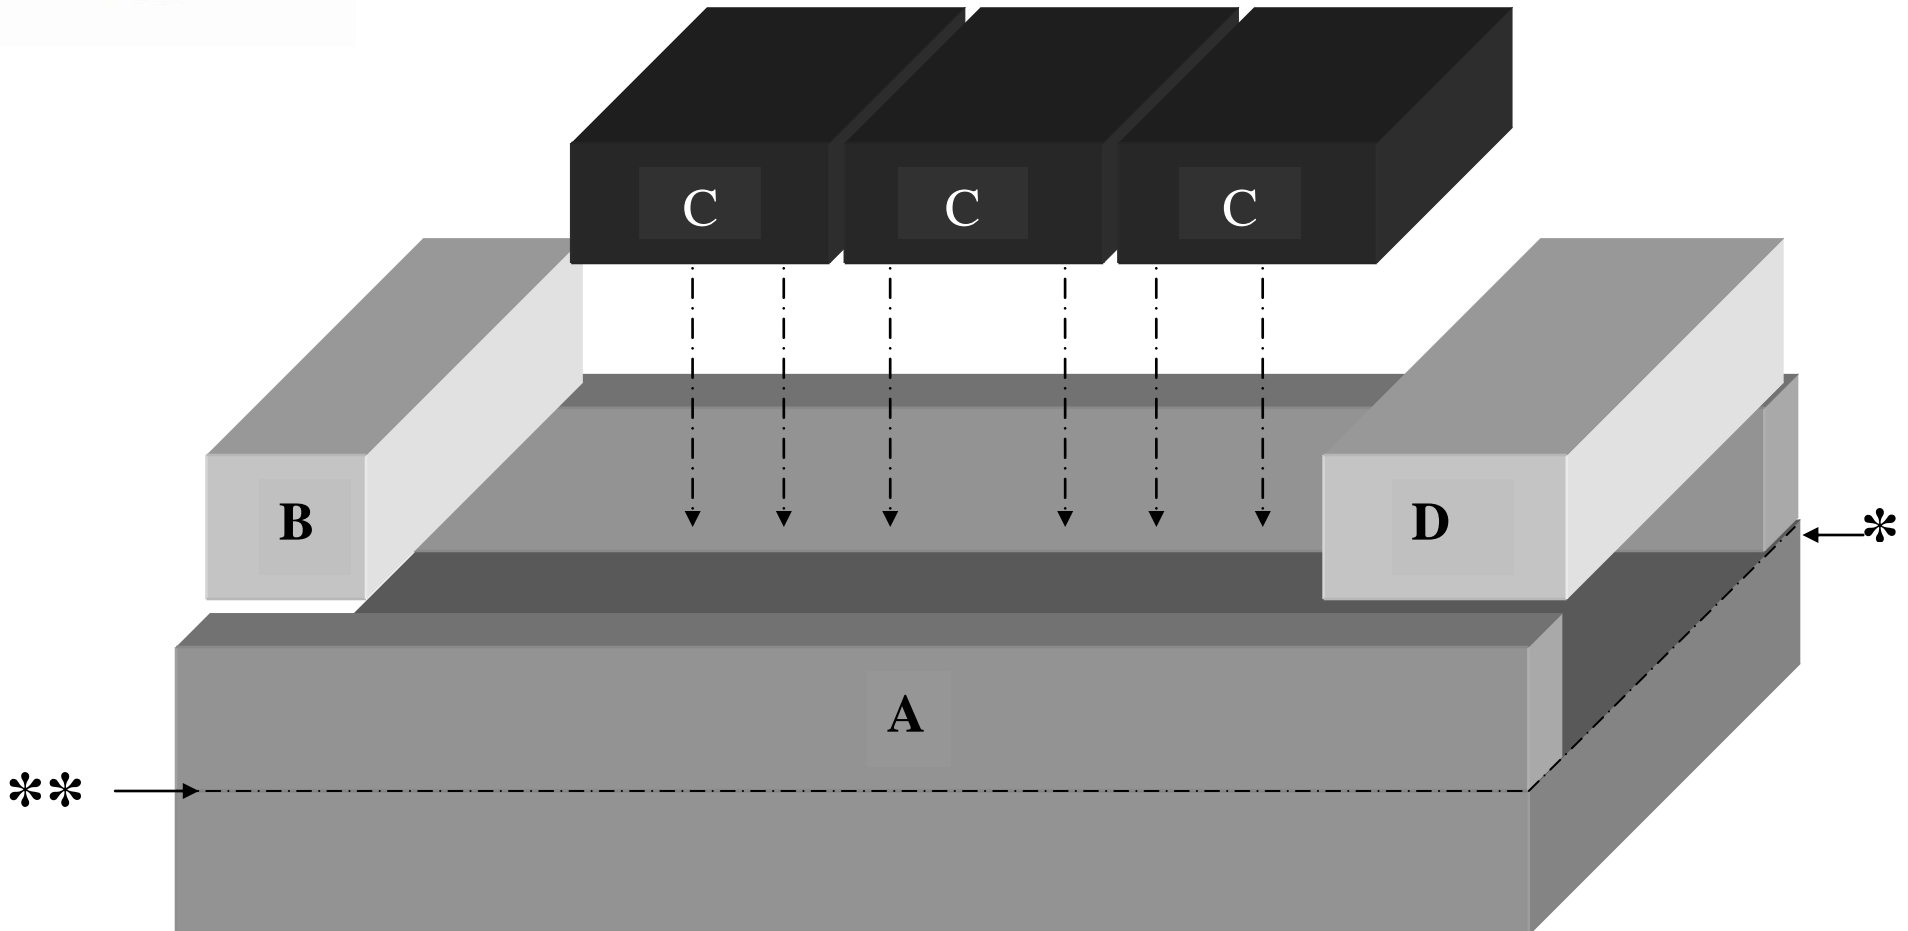

## How to build your own 3040NU-157

- A) 1 x Item #3040-BSR (6"x36"x80" Foam Base with built in full length Transfer Edges)
- B) 1 x Item #FS-430 (3"x4"x30" Poly/Foam Section with snaps) (Always Male Snaps)
- C) 3 x Item #FI-1930 (Poly/Visco Foam Insert 3"x19"x30" with snaps on both sides) or ROHO Section
- D) 1 x Item #FS-2030 (3"x20"x30" Poly/Foam Section with snaps) (Always Female Snaps)
- E) 1 x Item #ZR5 (Recovery 5 Removable Cover comes with Zipper)

\* Built in full length transfer edge

\*\* 360 degree zipper for attaching ZR5 Cover