




# Build your own 3040NU

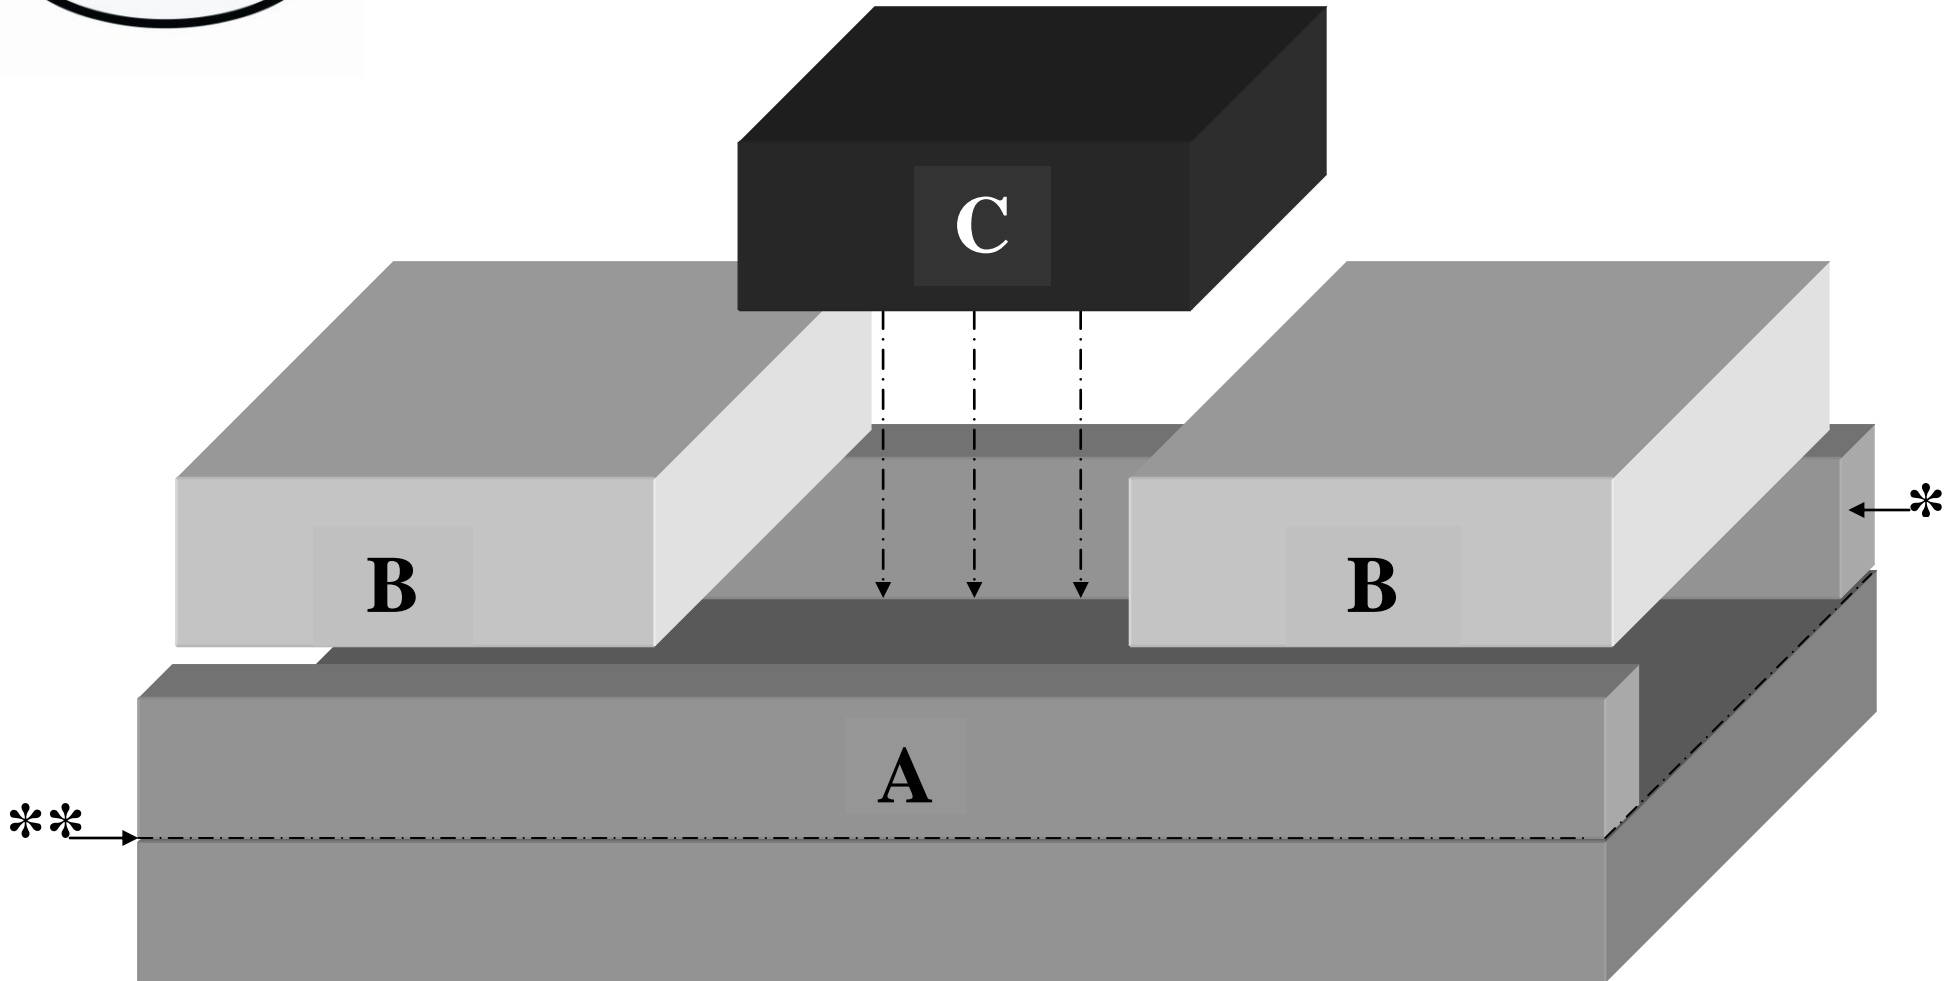

## How to build your own 3040NU

- A) 1 x Item #3040-BSR (6"x36"x80" Foam Base with built in full length Transfer Edges)
- B) 2 x Item #FS-3030 (3"x30"x30" Poly/Foam Section with snaps) (1xMale/1xFemale Snaps)
- C) 1 x Item #FI-1930 (Poly/Visco Foam Insert 3"x19"x30" with snaps on both sides) or ROHO Section
- D) 1 x Item #ZR5 (Recovery 5 Removable Cover comes with zipper)

\* Built in full length transfer edge

\*\* 3040-BSR Item #FS-3030 Item #FI-1930 Item #ZR5