




Build your own 3040NU-219 / 146 (Movable Divider)

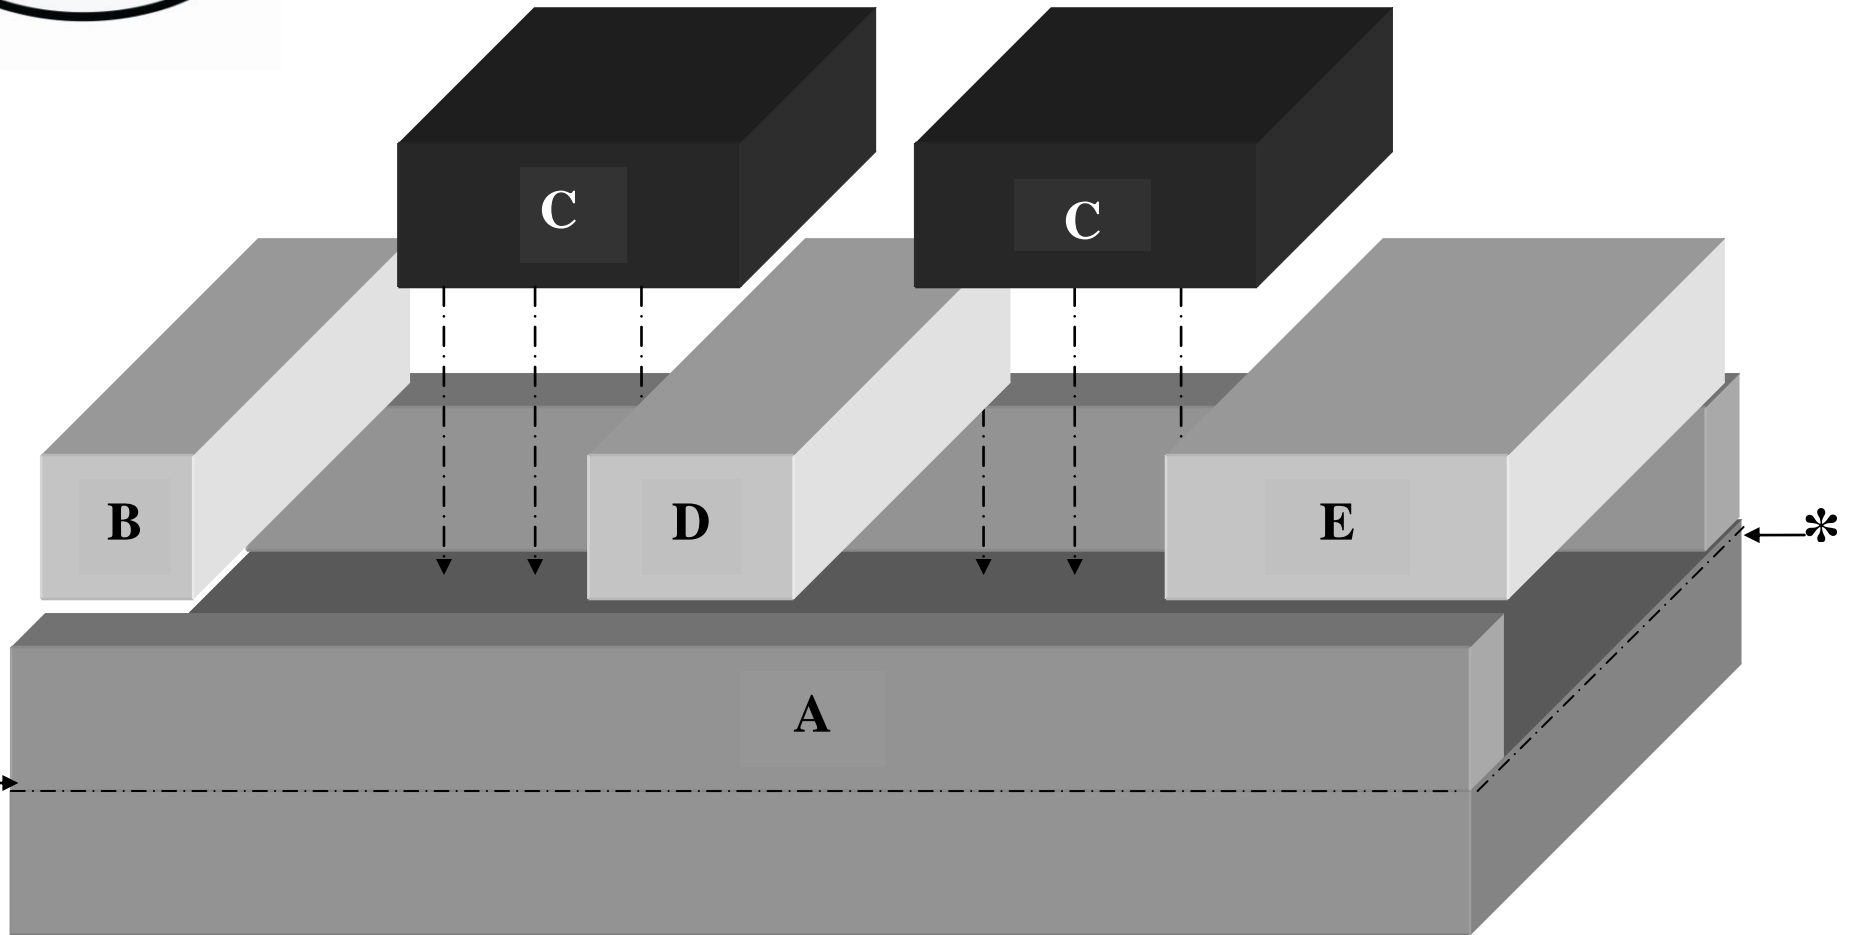

How to build your own 3040NU-219/146

- A) 1 x Item #3040-BSR (6"x36"x80" Foam Base with built in full length Transfer Edges)
- B) 1 x Item #FS-430 (3"x4"x30" Poly/Foam Section with snaps) (Always Male Snaps)
- C) 2 x Item #FI-1930 (Poly/Visco Foam Insert 3"x19"x30" with snaps on both sides) or ROHO Section
- D) 1 x Item #FS-830 (3"x8"x30" Poly/Foam Section with snaps on both sides)
- E) 1 x Item #FS-3030 (3"x30"x30" Poly/Foam Section with snaps) (1xFemale Snaps)
- F) 1 x Item #ZR5 (Recovery 5 Removable Cover comes with Zipper)

* Built in full length transfer edge

** 360 degree zipper for attaching ZR5 Cover